

In-Wall Speaker
WS524

AUDAC


PROFESSIONAL AUDIO EQUIPMENT

In-Wall Speaker WS524


Installation Guide

Installation Procedure


- 1) Cut a hole in the ceiling or wall on the desired mounting location of the loudspeaker. This should be a square with the following dimensions: 147mm x 147mm. The included cutout template can be used for marking.
- 2) Provide the loudspeaker connection cable through the mounting hole.
- 3) Take the loudspeaker, and remove the front grill.
The front grill can be removed by rotating the mounting clips outwards and pushing them down. The fixing screws will push the front grill out.

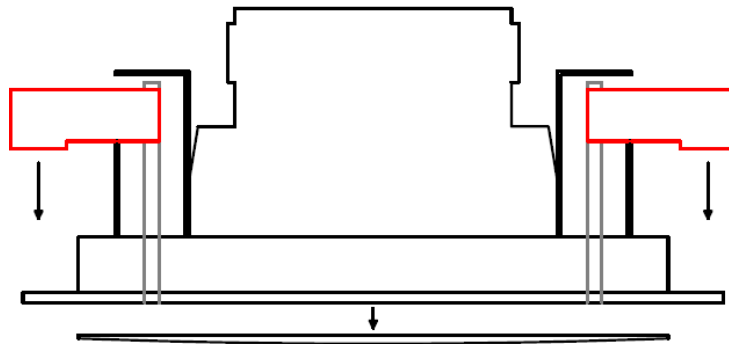

- 4) Pull the mounting clips up again, and rotate them inwards, making the speaker fit through the mounting hole in the ceiling.

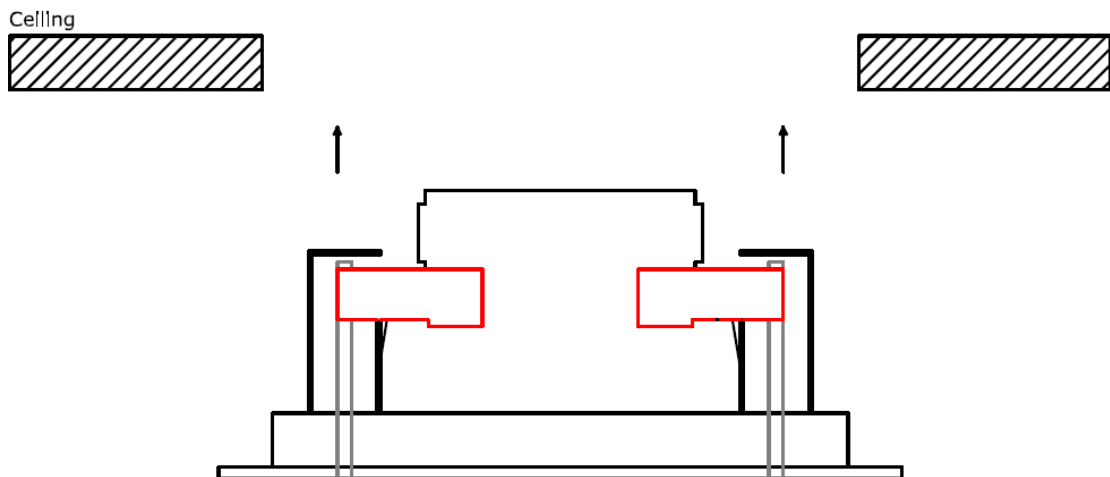

- 5) Connect the loudspeaker connection cable with the power tap connection block. On this connection block, several connections can be made for different power taps. Depending of the desired power, connections can be made for 8 Ohm Low impedance application, or 24 Watt / 12 Watt / 6 Watt for 100 Volt applications.
Press the locking mechanism of the desired power tap down, and insert the connection cable. After releasing the locking mechanism, the speaker connection cable is connected to the loudspeaker or transformer.
Always connect the common of the amplifier output to the **C** terminal, and the positive amplifier output to the desired terminal. (8 Ω For low impedance applications and the desired power terminal for 100 Volt applications).
- 6) Once the connections are made, the loudspeaker can be installed in the provided mounting hole. Insert the speaker in the provided mounting hole, and use a screwdriver for tightening the fixing screws. Once the screws are tightened by a quarter turn, the mounting clip will rotate outwards and will be locked behind the ceiling. From this moment, the loudspeaker cannot fall out the ceiling. To make the speaker equal with the ceiling, the fixing screws should be tightened.

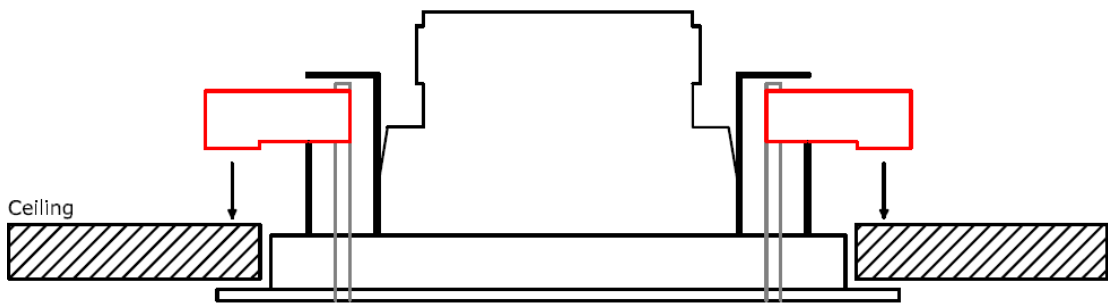

- 7) Once the mounting screws are tightened, the front grill can be assembled to the loudspeaker. On locations where high vibrations may occur, it is recommended to push the included small rubber pieces into the groove where the grill fits in. This small rubber pieces makes sure that the grill won't come out by vibrations.

